



 \mathbb{A}


M321...3...

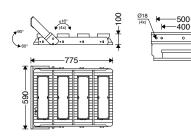

M321...4...

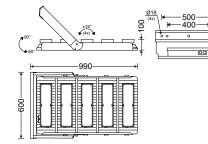

M321...5...

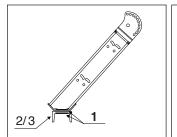

1. Installation with 4 or 5 optical compartments: For each bolt, use 2 square washers; one inside handle base and another inside U-channel. (M321...4...), (M321...5...)

- Installation with 4 or 5 optical compartments: For optimal strength, 8-cm or bigger U-channels shall be used as a base for mounting. (M321...4...), (M321...5...)
- Installation with 2 or 3 optical compartments: For optimal strength, 6-cm or bigger U-channels shall be used as a base for mounting. (M321...2...), (M321...3...)

Instruction for installation and utilization of **GALAXY** Modular Floodlight

