




M321...2...

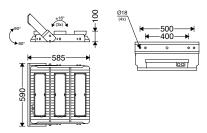


M321...3...

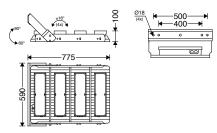

M321...4...

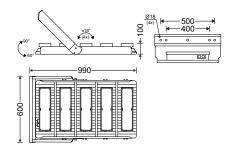

M321...5...

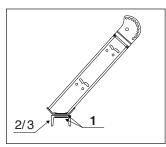

- Installation with 4 or 5 optical compartments: For each bolt, use 2 square washers; one inside handle base and another inside U-channel. (M321...4...), (M321...5...)
- Installation with 4 or 5 optical compartments: For optimal strength, 8-cm or bigger U-channels shall be used as a base for mounting. (M321...4...), (M321...5...)
- Installation with 2 or 3 optical compartments: For optimal strength, 6-cm or bigger U-channels shall be used as a base for mounting. (M321...2...), (M321...3...)





Instruction for installation and utilization of **GALAXY** Modular Floodlight




Cat. No.	Projected Area	Maximum number of luminaires per MCB (MCB Type B ,C)						w
	(m²)	B16	B25	B32	C16	C25	C32	(kg)
M3212	0.185	2	4	6	4	7	9	15.6
M3213	0.275	2	4	6	4	7	9	21.9
M3214	0.365	2	4	6	4	7	9	28.2
M3215	0.456	2	4	6	4	7	9	35.0

* **GALAXY** can be ordered, upon request, with customized Timer Dimming scenarios. The above table can be completed in order to keep records of the customized settings. For more information, contact Megalite sales department.

Timer dimming setting

	First step	Second step	Third step	Fourth step	Fifth step	Sixth step	Seventh step
Duration							
Dimming Value							
Dimming mode	ght Timer □	elf-Adapt-Midniç	e Timer□ Se	apt-Precentag	□ Self-Ada	er Dimming	Traditional Tim





1- For proper utilization of this product and safety, it is mandatory to closely

comply with the directions and notes in this instruction and guide.





2- Earth connection as provided is mandatory.

3- Do not directly touch or impact LED module.

Execution Date: 05/09/2015

Tracking Code: RO-097

